


**Phone:** (954)757-2114 **Fax:** (954) 507-6960 framelessshowerdoors.com


## Door and Panel with 90 Degree Return

Centerline Measuring

Measure the center of the glass placement.

Provide the measurement where the front line and return line intersect

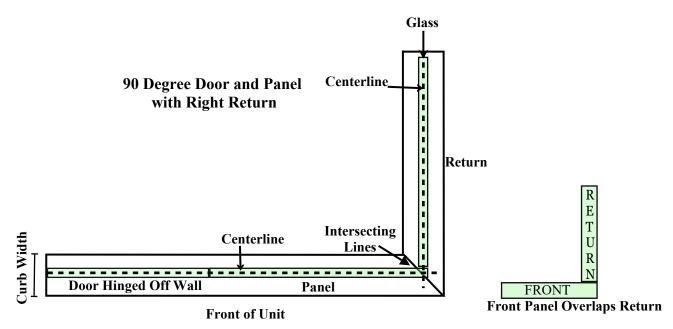

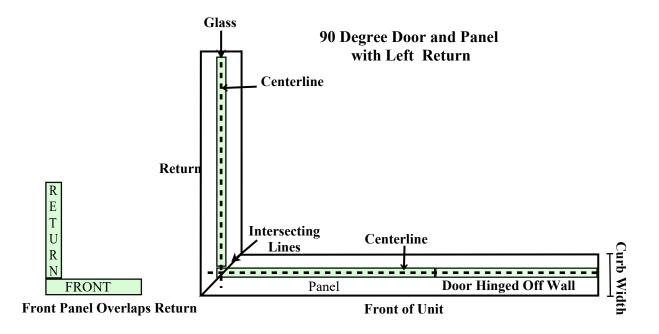

ALL measurements are to be taken from the top of the curb or from the tub deck. Not from the primary floor Unless there is a zero entry.